


Technical Details

- Dimensions: 295 x 99 x 4mm

Box Contents


- 15 x Thermal pads 1mm
- 8 x M3x6 screws
- 19 x Red washers
- 11 x M3x12 screws
- 1 x Allen key

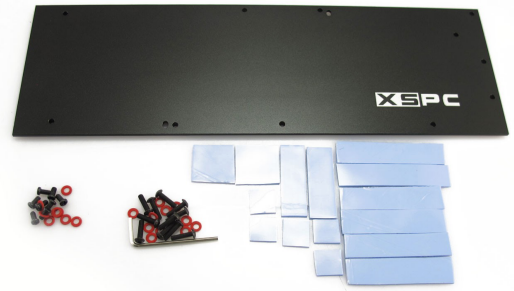

Note: This backplate is only suitable for reference design R9 295X2 cards. If you are unsure if your card is a reference design card, contact us prior to installation to make sure.

1. Follow the Razor R9 295X2 manual up to and including step 10. The steps below replace steps 11 and 12 in the original manual.

2.

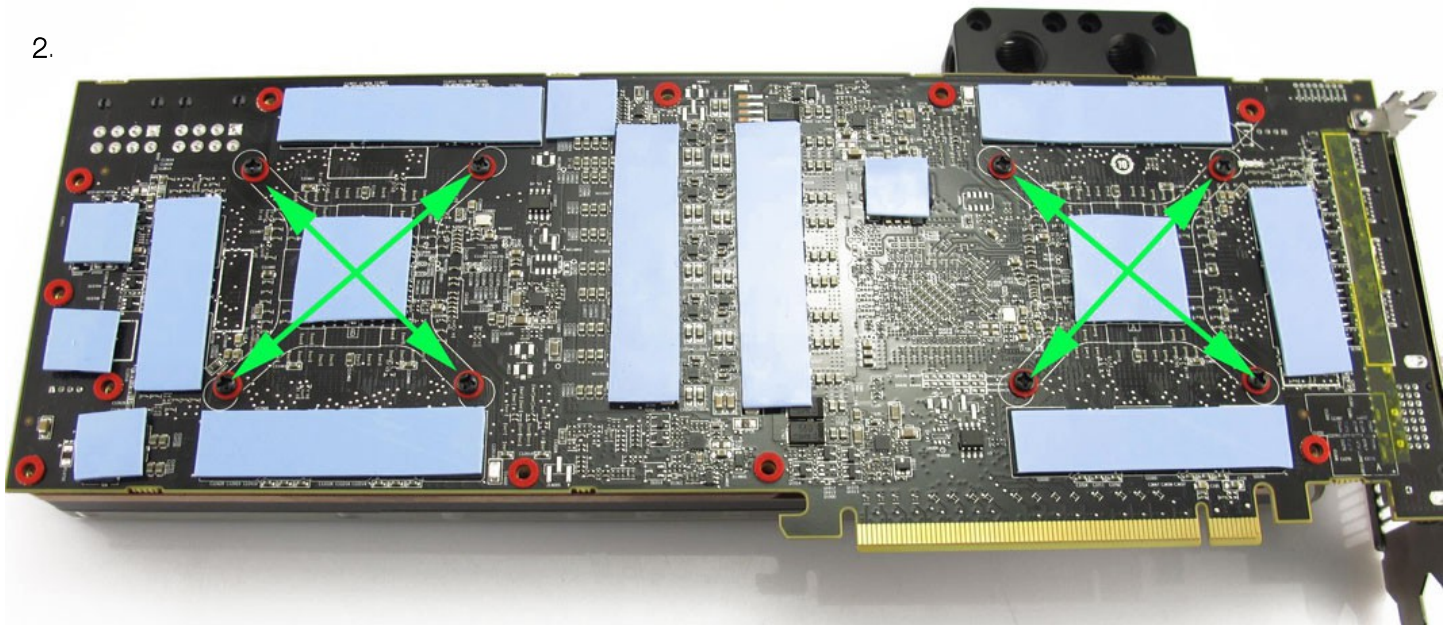

2. Flip the card over, making sure the front thermal pads stay in place. Place the red washers over the screw holes shown above and fit the eight crosshead screws on the positions marked in green. Now remove the protective film from both sides of the thermal pads and place them on the fifteen locations shown above.

3.



3. Place the backplate on the back of the card and attach it using the allen head screws. Tighten each screw gradually and do not over tighten the screws as this may bend the card and cause permanent damage.

The card is now ready for use. When you first boot it is advisable to use monitoring software to check the core temperature. If the temperature is high you will need to remount the block.