

Technical Details

- Dimensions: 175 x 125.4 x 26.35mm


Box Contents

- 4 x Thermal pads 1mm
- 2 x Thermal pads 1.5mm
- 8 x M2.5 x 12 screws
- 12 x Red washers




Note: This backplate is only suitable for reference design R9 Fury X cards. If you are unsure if your card is a reference design card, contact us prior to installation to make sure.


1. Follow the Razor R9 Fury X manual up to and including step 11. The steps below replace steps 12 and 13 in the original manual.

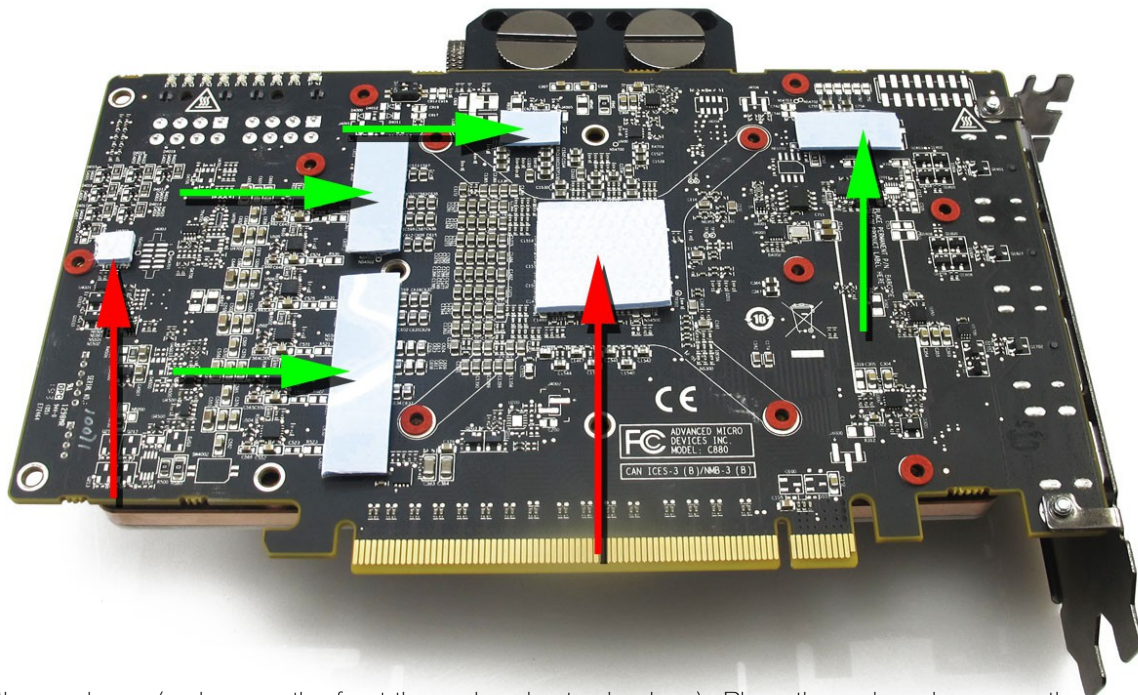

2. Flip the card over (make sure the front thermal pads stay in place). Place the red washers over the screw holes shown above. Now remove the protective film from both sides of the thermal pads. Place the 1.5mm pads in the positions marked in red and the 1mm pads in the positions marked in green.

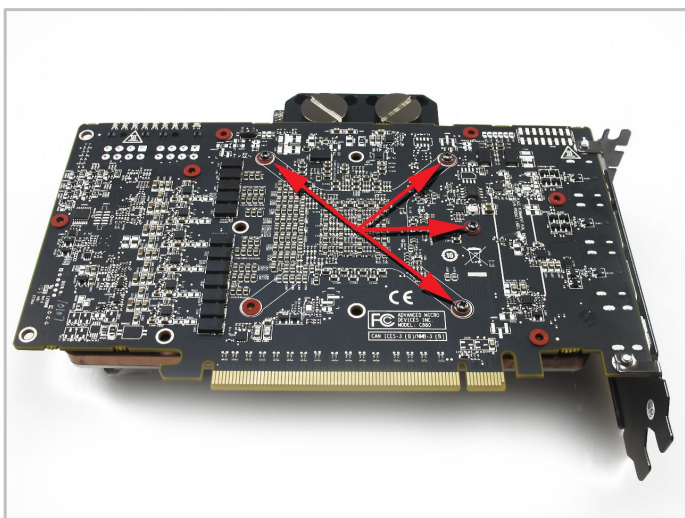

3. Fit the original screws to the positions marked above. Do not over tighten the screws as this may bend the card and cause permanent damage.

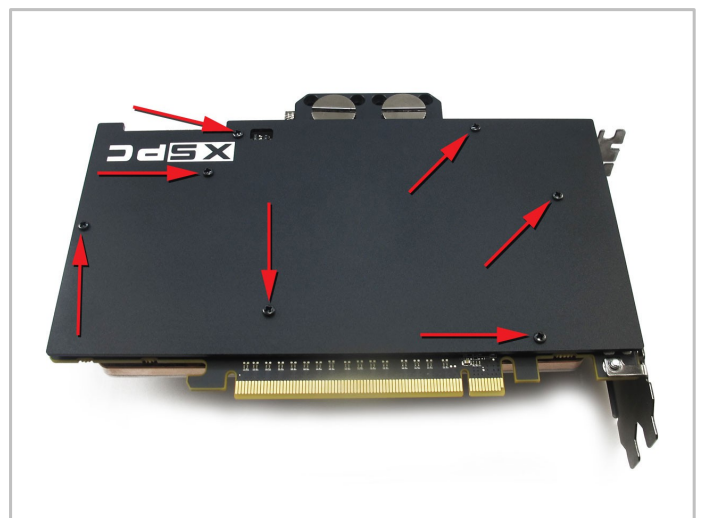

4. Place the backplate on the back of the card. Attach the backplate to the block using the provided screws.

The card is now ready for use. When you first boot it is advisable to use monitoring software to check the core temperature. If the temperature is high you will need to remount the block.