


## Technical Details

- Dimensions: 266.7 x 100.04 x 4mm


## Box Contents

- 6 x 1mm thermal pad
- 17 x M3 \* 10mm screws
- 17 x M3 red washers
- 1 x Allen key

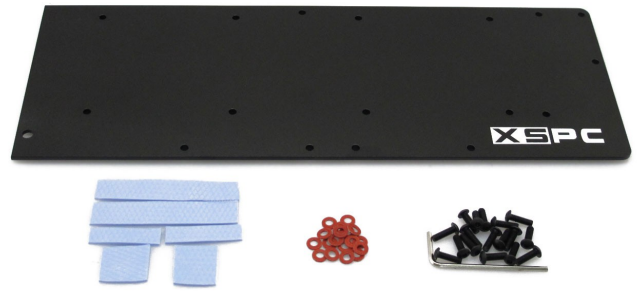


**Note:** This backplate is only suitable for reference design Radeon Pro Duo cards. If you are unsure if your card is a reference design card, contact us prior to installation to make sure.

1. Follow the Razor Radeon Pro Duo manual up to and including step 11. The steps below replace steps 12 and 13 in the original manual.

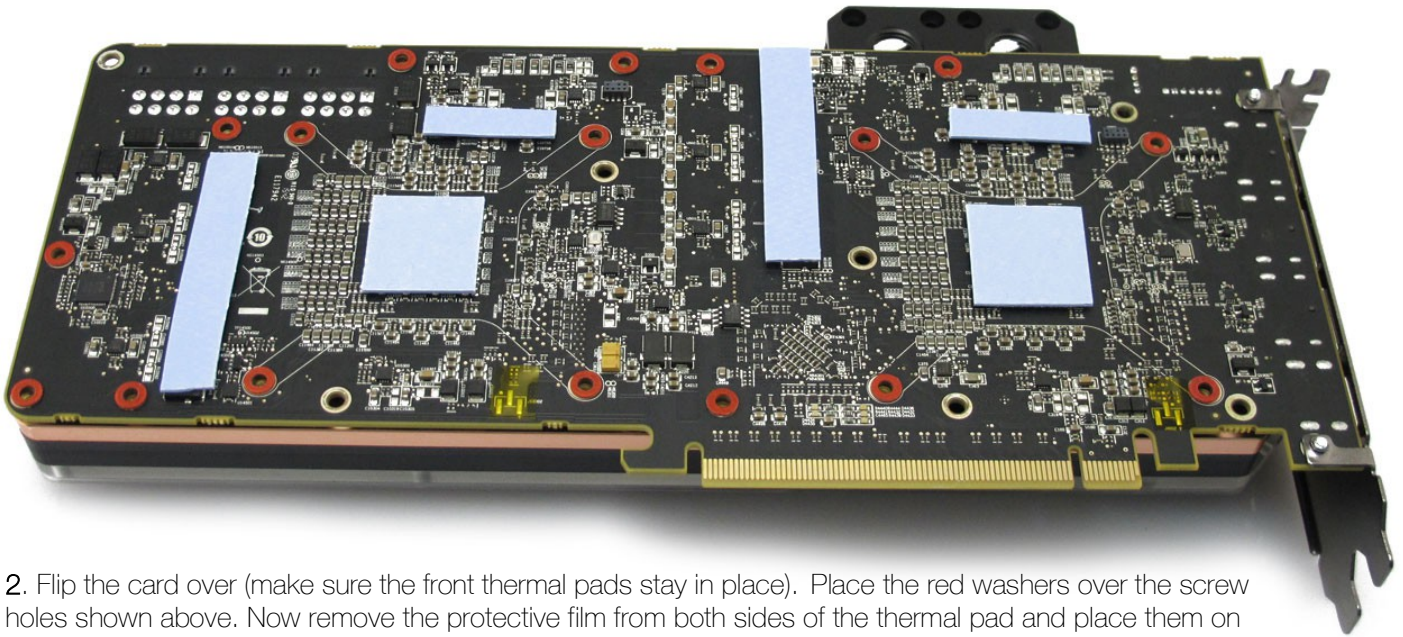

2. Flip the card over (make sure the front thermal pads stay in place). Place the red washers over the screw holes shown above. Now remove the protective film from both sides of the thermal pad and place them on the positions shown above..

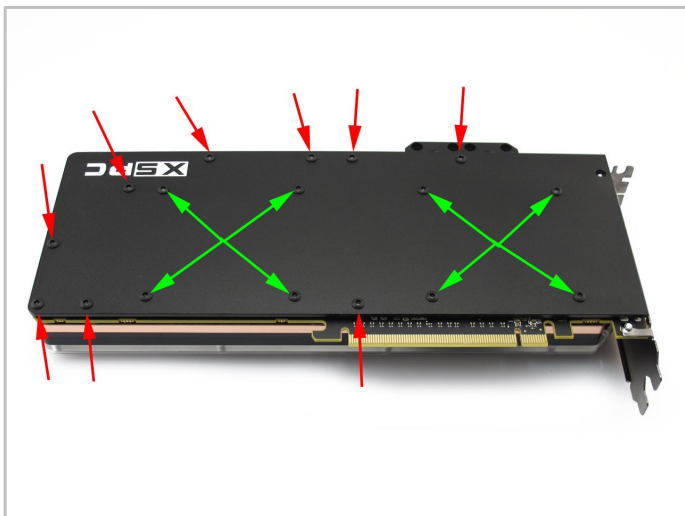

3. Fit the backplate with the provided screws. It's best to fit the screws marked in green first and always tighten each screw gradually. Do not over tighten the screws as this may bend the card and cause permanent damage.



4. The card is now ready for use. When you first boot it is advisable to use monitoring software to check the core temperature. If the temperature is high you will need to remount the block.