

Technical Details

- Dimensions: 172.5 x 98 x 4mm


Box Contents

- 1 x GTX670 Backplate
- 8 x M3 10mm Screws/Washers
- 3 x Blue 1mm Thermal Pads
- 1 x Allen Key




Note: This backplate is only suitable for reference design GTX670 cards. If you are unsure if your card is a reference design GTX670 contact us prior to installation to make sure.


1. Follow the Razor GTX670 manual up to and including step 10. The steps below replace steps 11 and 12 in the original manual.

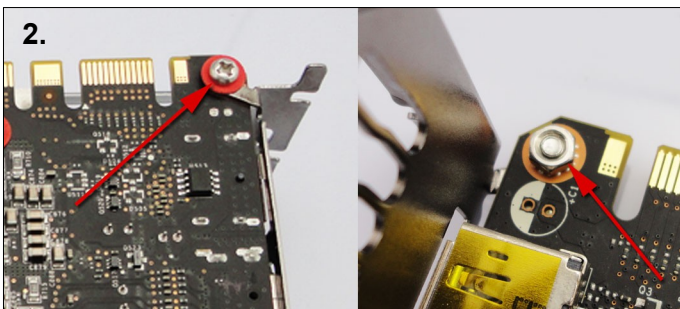


2. Use an M3 screw and nut to secure the PCI backplate. Now carefully place the waterblock onto the card and line up the screw holes.

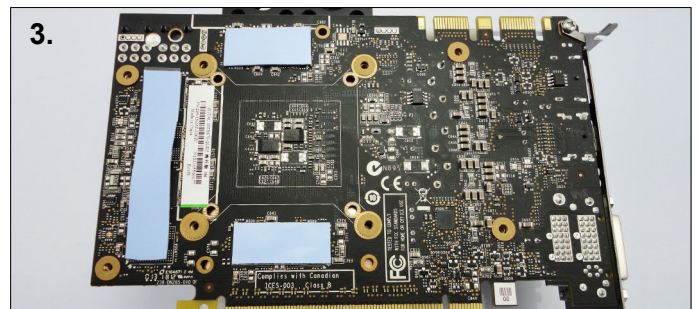

3. Flip the card over, making sure the thermal pads stay in place. Remove the tape from both sides of the thermal pads and place them on the positions shown above.

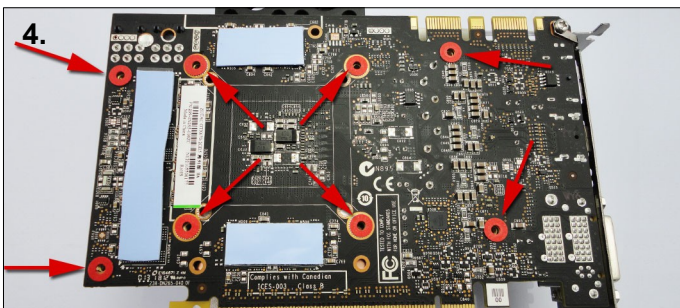

4. Place the red washers over the screw holes shown above.

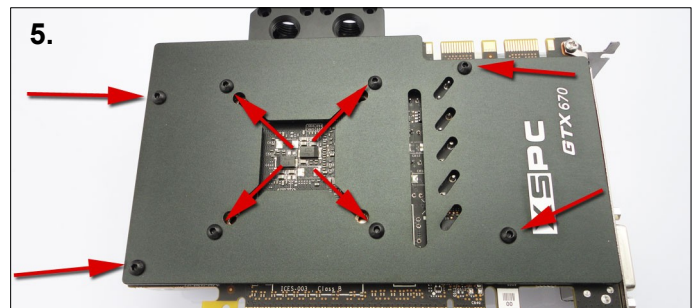

5. Place the backplate on the back of the card and attach it using the black M3 screws.

6. Do not over tighten the screws as this may bend the card and cause permanent damage.

The card is now ready for use. When you first boot it is advisable to use ATITool or other monitoring software to check the core temperature. If the temperature is high you will need to remount the block.

